



IDX INCORPORATED

THE INFORMATION CONTAINED IN THIS MESSAGE IS LEGALLY PRIVILEGED AND CONFIDENTIAL INFORMATION INTENDED SOLELY FOR THE USE OF THE PERSONS OR ENTITIES NAMED BELOW. IF YOU ARE NOT SUCH PERSONS OR ENTITIES, YOU ARE HEREBY NOTIFIED THAT ANY DISTRIBUTION, DISSEMINATION OR REPRODUCTION OF THIS MESSAGE IS STRICTLY PROHIBITED. IF YOU HAVE RECEIVED THIS MESSAGE IN ERROR, PLEASE IMMEDIATELY CALL US AT 1-800-643-1109.

FROM: James H. Halsey

DATE: August 22, 2000

SUBJECT: IGT 960 Series/Vision To Activate Power to Xeptor with Door Open

Push self-test button (WHITE)

Menu will come up

1. Go To Diagnostic
2. Go To Input/Output Test
3. Go To Front Panel I/O Test
4. Go To Acceptor Enable

Cash out is the Up button

Bet one is the Down button

Spin is the Enter button

Another Version for above depending on display area:

1. There is a white switch on I/O board. Press Switch.
2. Screen will go to I/O Test
3. Press Enter-New menu will come up then use the up and down arrow buttons
4. Go To Output
5. Press Enter-New menu will come up then use the up and down arrow buttons
6. Go To Door
7. Press Enter-New menu will come up then use the up and down arrow buttons
8. Go To Coin Lock Out
9. Press Enter

Subject: IGT GAME KING: How to Activate Power to Xeptor with door open

1. Push Self-test button and menu screen appears
2. Go to Diagnostic page
3. Go to Input/Output page
4. Go to Front Panel I/O page
5. Next Page button
6. Acceptor Enable



IDX INCORPORATED

Power on for coin Xeptor®, (coin lock out), for IGT S+ and PE+ slot machines.

Programming for X10 & X50 slot machines with door open

PE+ Video Game: Push white self-test button and follow on screen instructions to coin lockout.

IGT S+ - New Software Version:

1. Push white self test button on inside top right of the machine by the power switch until the number 10 appears in the left led position.
2. Push reset switch, on the right outside of unit or the white self-test button on the inside top right, if it's an older unit. Toggle reset switch left or right until the number 34 appears.
3. Hold down spin switch on front of machine and toggle reset switch to the left or right to number 35.
4. Power has now been applied to the Xeptor®. This is the IGT lock out test.

Cash out button is the Up button.

Bet one is the Down button.

Spin is the Enter button.

IGT S+ Old Software Version:

1. Push white self-test button one time.
2. Push bet 1 button until it toggles to number 10.
3. Push change button until number 34 appears.
4. Hold down spin button.
5. Press change button until number 35 number appears.
6. Power has now been applied to the Xeptor®. This is the IGT lock out test.